

Hoist Operator Safety Vest Visual Inspection

The following inspection criteria is recommended to be performed every 30 days and before use. In the event there are conditions or issues other than what is listed, please call Aerial for technical assistance.

1. Inspect load bearing and conjoining seams as show in figure below.

NOTE: No stitching or sewing repairs authorized on load bearing webbing and seams.

2. Inspect all fabric and webbing for:

- Cuts, tears, and abrasions
- Open seams and loose or broken stitching
- Contamination damage such as oil, hydraulic fluid, grease, etc.

NOTE: If contamination found on load bearing webbing, do not use petroleum based solvents. Clean with mild soap and water. If contamination cannot be removed then vest shall be removed from service.

3. Inspect all hardware for:

- Cracks
- Corrosion
- Mechanical operation
- Bent or missing parts

NOTE: If damage found on load bearing hardware, replacement shall be performed by manufacturer (Aerial) only.

Service Life: 10 Years from date of manufacture

