

## TFSS w/Auto Inflator

Inspect the entire assembly for cuts, tears, abrasion damage, open seams, loose or broken stitching and/or contamination damage.




Knurled  
nut

1. Tighten knurled locking nut by turning counter clockwise until snug.



2. Install CO2 cylinder. (3/8" thread 38 gram, 150.6 gram min. wt.)

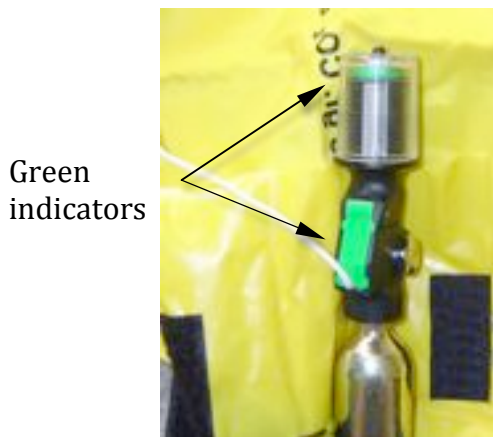

Green  
indicators

3. Check for two green indicators.



Fabric  
protector

4. Close velcro fabric protector. Lanyard extends out top of protector.



5. Fold bladder in half, behind inflator even with clear cap.



6. Fold oral inflator side outer edge towards center.



7. Tightly roll side of bladder and position next to inflator/bottle.




8. Fold remainder even with bottom and stow in pouch.



9. Repeat with other side.



10. Pull bottom flap over bladder. Fold top down and mate hook and loop tape.

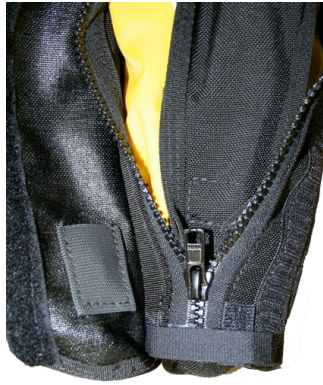

11. Start zipper from bottom, mate hook and loop tape.



12. Continue zipping up completely, slide fastener will separate. Mate hook and loop tape.



13. Stow slider in cover.



14. Close protector flap and secure three snaps located at top.